

COMPACTOR FIRE ALARM SYSTEM



- Internal Temperature of compactor measured directly with Temperature sensor
- Compactor internal temperature can be set precisely in the controller unit
- If internal temperature of compactor increases due to foreign material caught in between the screw compression, controller will trip immediately.
- Sensors are calibrated precisely so frequent calibration is not required.
- Fire is well detected before major disaster occurs.